




**PLACING THE HEAD SUSPENSION/BUMP CAP AIR DUCT INTO THE HOOD**

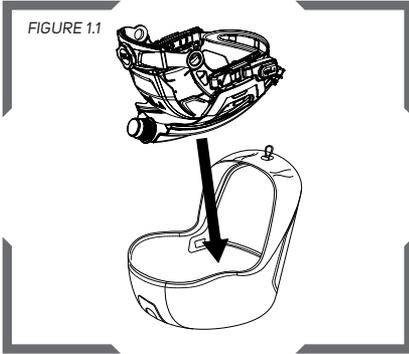

Insert the head suspension or bump cap assembly into the hood.

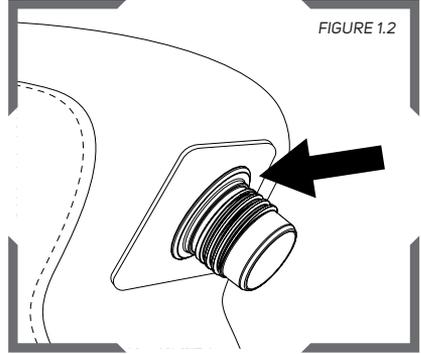


Insert the threaded inlet of the air duct into the black rubber seal on the back of the hood. Starting from the bottom side, stretch the rubber seal over the retaining rib behind the threaded section.

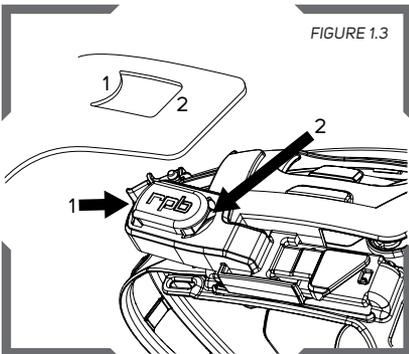

Line up the tabs of the lens with the clips on the sides of the lens mount.

- Hook point 1 **under** point 1 as pictured.
- Snap point 2 **over** point 2 as pictured.

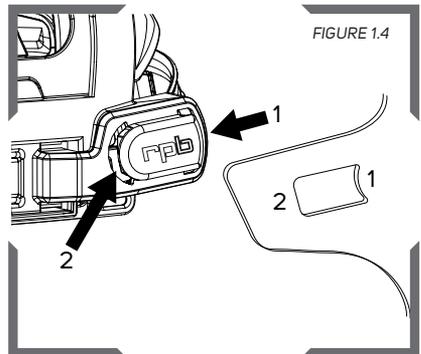

Repeat the steps for the other side.