


Watch the How-To Video: "How to connect to wifi - hotspot" and "How to connect to wifi - client mode"
gvs-rpb.com/supplied-air-respirators/how-to-gx4

The following Instructions show you how to connect to your GX4 in both Hotspot and Client Modes.

Accessing the GX4 Console:

Note: It is advisable to connect firstly in **Hotspot Mode** – this is where the GX4 emits a WiFi signal and connects your computer/ phone and the GX4 together. (Note: Computer must have wireless capabilities)

1. Disconnect your computer/phone from the local and/or mobile network.
2. Turn on the GX4 and select "Hotspot" mode.
 - a. Press 'Menu' / ↓ to Network / OK / ↓ to Mode / OK / ↓ to Hotspot / OK
 - b. Indicator will show device is connected in Hotspot Mode (as below).

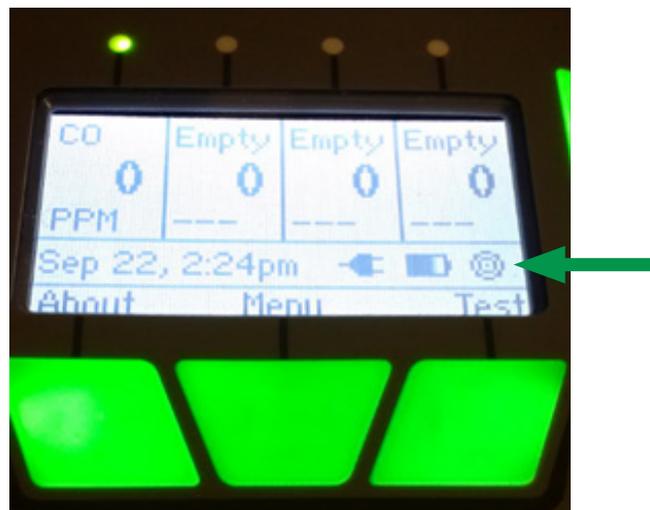

3. Find the SSID of your GX4 device.
 - a. Press 'About' / ↓ to Network / read SSID. (Example: RPB192f)


4. Search in your accesses connections for the SSID of your device (example: RPB192f) – select it and connect to it.




5. Bring up a web browser and key in 192.168.1.3 and hit enter – the GX4 Console will display.
6. From there you can see all of the information about the GX4 and access the logs, certificate, and more.

For example:

To print the Calibration Certificate, click on the "Links" arrow to access the Calibration Certificate.

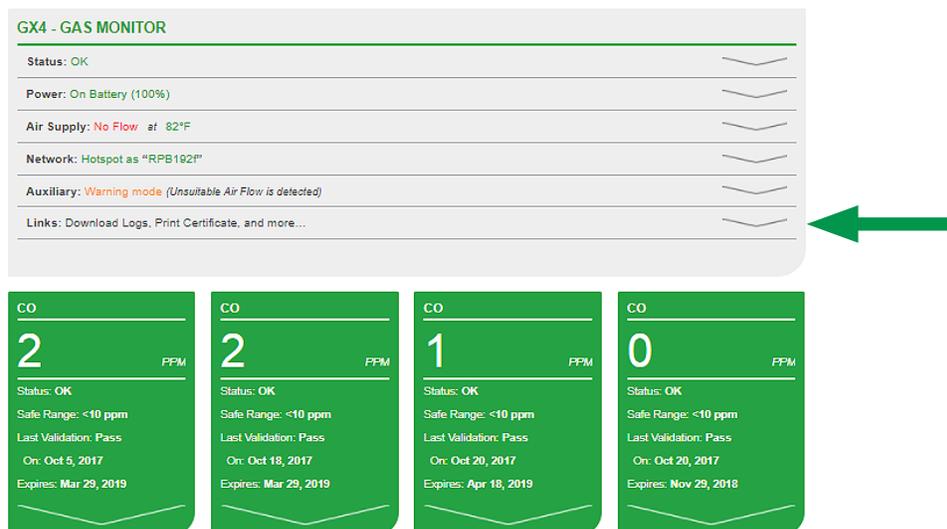


7. Download the Certificate and then print it.

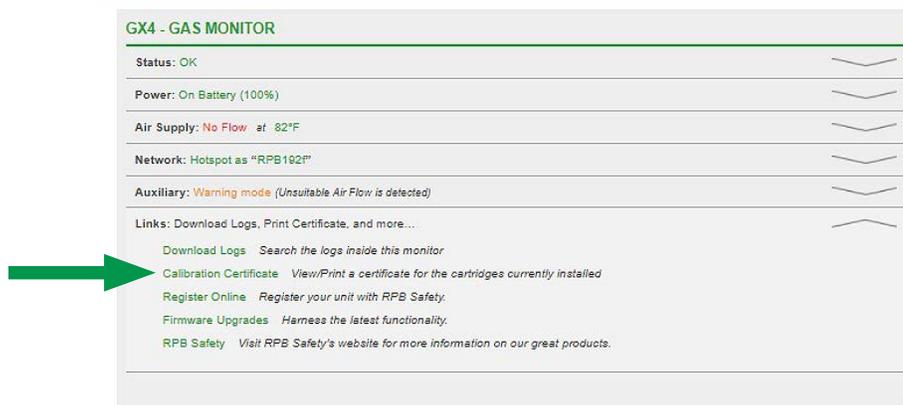


To connect via **Client Mode** – this allows you to also access the internet.

1. With the GX4 Console open
 - a. Expand the Networks Menu and click on "Scan"

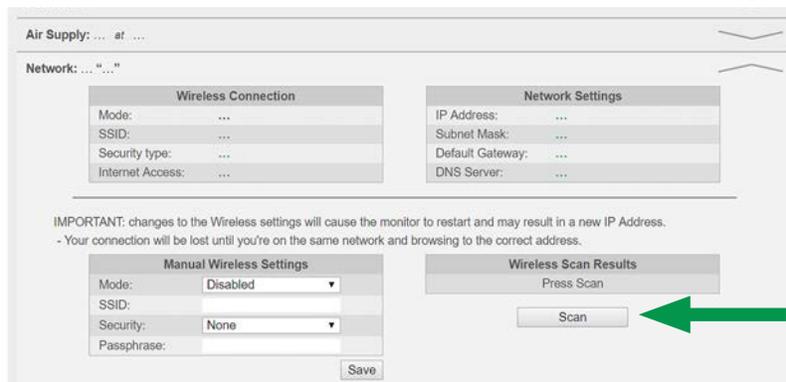

2. From the menu options, select a Network that you know the password for.

3. Enter the correct password and click "Save" - GX4 will automatically turn off and then turn back on – in Client Mode. Close out of the console.

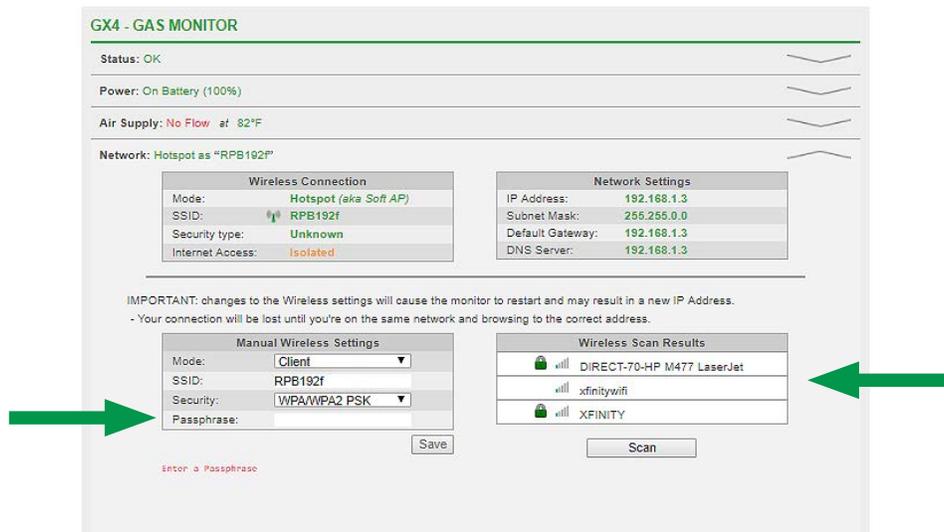

The GX4® are connected to a network only when you see "bars" as below. Repeat step 3 if necessary.



4. Go back to your computer and search your Access Connections for the same network you put the GX4 onto and connect your computer to this network. (This may have happened automatically.)
5. Go to the GX4 and select Network Status from the menu [About / Down / Down] and read the IP Address: (example: 10.10.10.10)
6. Bring up a browser on your computer and enter this IP address – you will see the Console.